



Harmonic MediaGrid ContentDirector 1000E and High Performance ContentDirector 2000B

Quick Reference Guide

Front Panel Components

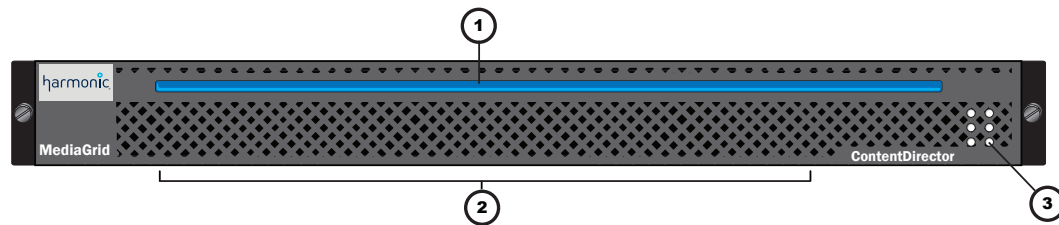


- 1 Power indicator/Wink
- 2 Air vents
- 3 Status LEDs

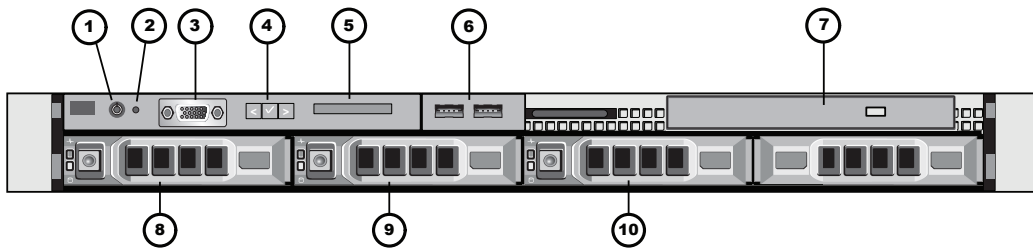

- 1 Power on indicator/button
- 2 System ID button
- 3 Video connector
- 4 LCD menu buttons
- 5 LCD panel
- 6 USB connectors (2)
- 7 Optical drive
- 8 Hard drive 0
- 9 Hard drive 1
- 10 Solid-state drive (for High Performance ContentDirector 2000 only)


Rear Panel Components

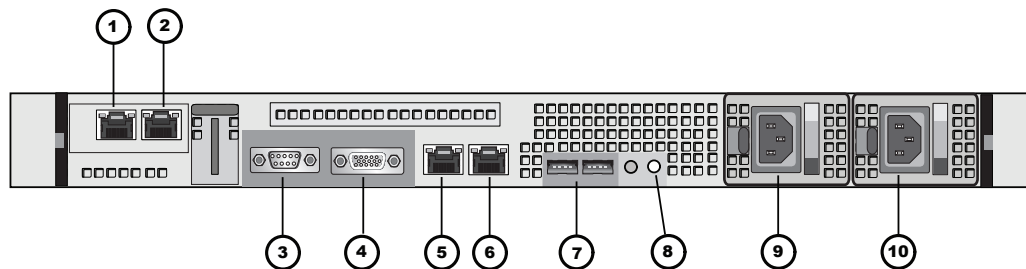

- 1 NIC 3 connector
- 2 NIC 2 connector
- 3 Serial connector
- 4 Video connector
- 5 NIC 0 connector
- 6 NIC 1 connector
- 7 USB connectors (2)
- 8 System identification button
- 9 Power supply 1
- 10 Power supply 2

Front Panel LEDs

Front Panel Status Indicators

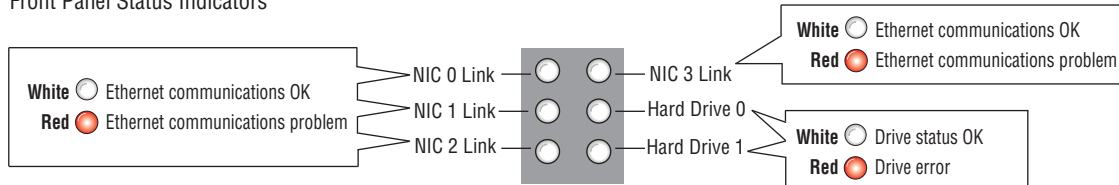

Note: The status indicators for the High Performance ContentDirector 2000 do not display the status of the solid-state drive.

System Identification Button


Press to toggle system ID on or off.

- Off** Normal system operation
- Light Blue** [Blink] System is being identified (winked)

LCD Panel

- Light Blue** [Solid] Normal system operation. LCD panel displays status information.
- Amber** [Solid] System needs attention. LCD panel displays an error code followed by descriptive text.

Drive Indicators

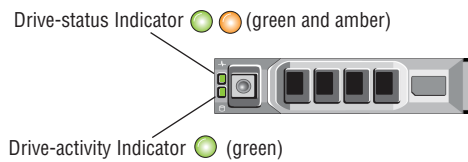


Drive-status Indicator Pattern (RAID Only)

- [Blinks green two times per second] Identify drive/preparing for removal
- [Off] Drive ready for insertion or removal
- Note:** The drive-status indicator remains off until all hard drives are initialized after system power is applied. Drives are not ready for insertion or removal during this time.
- [Blinks green, amber, and off] Drive predicted failure
- [Blinks amber four times per second] Drive failed
- [Blinks green slowly] Drive rebuilding
- [Steady green] Drive online
- [Blinks green three seconds, amber three seconds, and off six seconds.] Rebuild aborted

Rear Panel LEDs

NIC Indicators

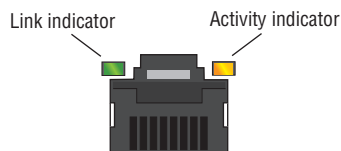

NIC Indicator Codes


- [Link and activity indicators are off] The NIC is not connected to the network.
- [Link indicator is green] The NIC is connected to a valid link partner on the network.
- [Link indicator is amber] The NIC is connected to a valid network link at 10/100 Mbps.
- [Activity indicator is amber blinking] Network data is being sent or received.

System Identification Button/Indicator

Press to toggle system ID on or off.

- Light Blue** [Solid] Normal system operation
[Blink] System is being identified (winked)
- Amber** [Solid] System needs attention. Note the LCD panel will display an error code followed by descriptive text.
[Blink] System is being identified (winked).

Power Supply Status Indicator/Handle

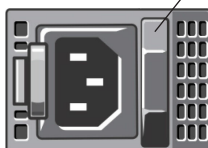

- [Not lit] AC power is not connected.
- [Green] Indicates that a valid AC source is connected to the power supply, and that the power supply is operational.
- [Flashing Amber] Indicates a problem with the power supply. For more information, refer to "Hardware Reference" in the *Harmonic MediaGrid Installation and Configuration Guide*.
- [Flashing Green] When hot-adding a power supply, this indicates that the new power supply is mismatched with the other power supply. (in terms of efficiency, feature set health status, and supported voltage). Replace the power supply that has the flashing indicator with a power supply that matches the capacity of the other installed power supply.